

# BATHTUB REFINISHING SERVICES IN PORTLAND, OR & VANCOUVER, WA

[HOME](#)

[CLAWFOOT BATHTUBS FOR SALE](#)

[AAA BATHTUB REFINISHING PROCESS](#)

[MORE...](#)

[CART \(0\)](#)



## HOW YOUR CLAWFOOT BATHTUB NEEDS TO BE SETUP FOR US TO REFINISH PROPERLY

If you need assistance removing your valve we have had great luck with Apollo Drain, both in this business and our previous business.  
A combined 20 years of using Apollo Drain without issues.

### \*\*NOTES\*\*



\*\*\*We only need one water supply line. Hot side if water is not too hot. Cold side if any doubt water will be too hot. Please ensure the hot is not too hot by carefully placing your hand under to ensure sustained exposure is not too hot. \*\*\*\* Two lines work too.

\*\*\*We need the drain/overflow pipe connected. Please do not have the drain/overflow pipes disconnected.

### Instructions:

1. Tub as we first see them - notice the taps are on the surface to be painted, and it's too intricate to mask and get good results.
2. Full view - Please route water lines up from the floor, where there are on/off shut off valves that we use to control water flow.  
\*\*NOTE these lines can be **soft** or **hard** line. NOT ALL LINES are long enough - you may need to get a longer line.
3. Zoomed in view- lines routed up from the floor go into the tap holes of the tub from the backside.

4. As viewed from inside of the tub
5. After we are done with the water, we poke the lines back out of the tub so we can spray the area unobstructed.

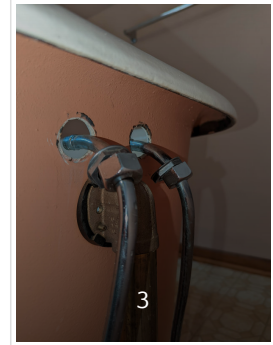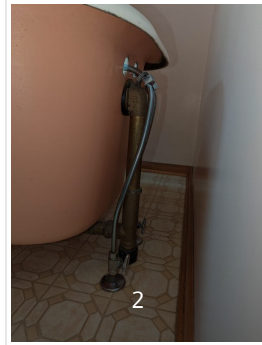

Credit/Debit Accepted -Add 5% Convenience Fee  
Licensed - Bonded - Insured



**Hours**

Mon-Sat 8am 8pm

**Telephone**

503-512-9778

**Email**

info@AAAbathtubrefinishingco.com